

AGAINST MOZ lace replacement

1: Pay attention to the positioning of cables



CABLE END 1
CABLE END 2

ON TOP OF THE OTHER CABLES !

AGAINST MOZ lace replacement


2: Remove the reel knob by inserting and rotating a small screwdriver or the tip of a knife in to the slot



AGAINST MOZ lace replacement



3: Insert the stainless cables into the holes as showed in the picture

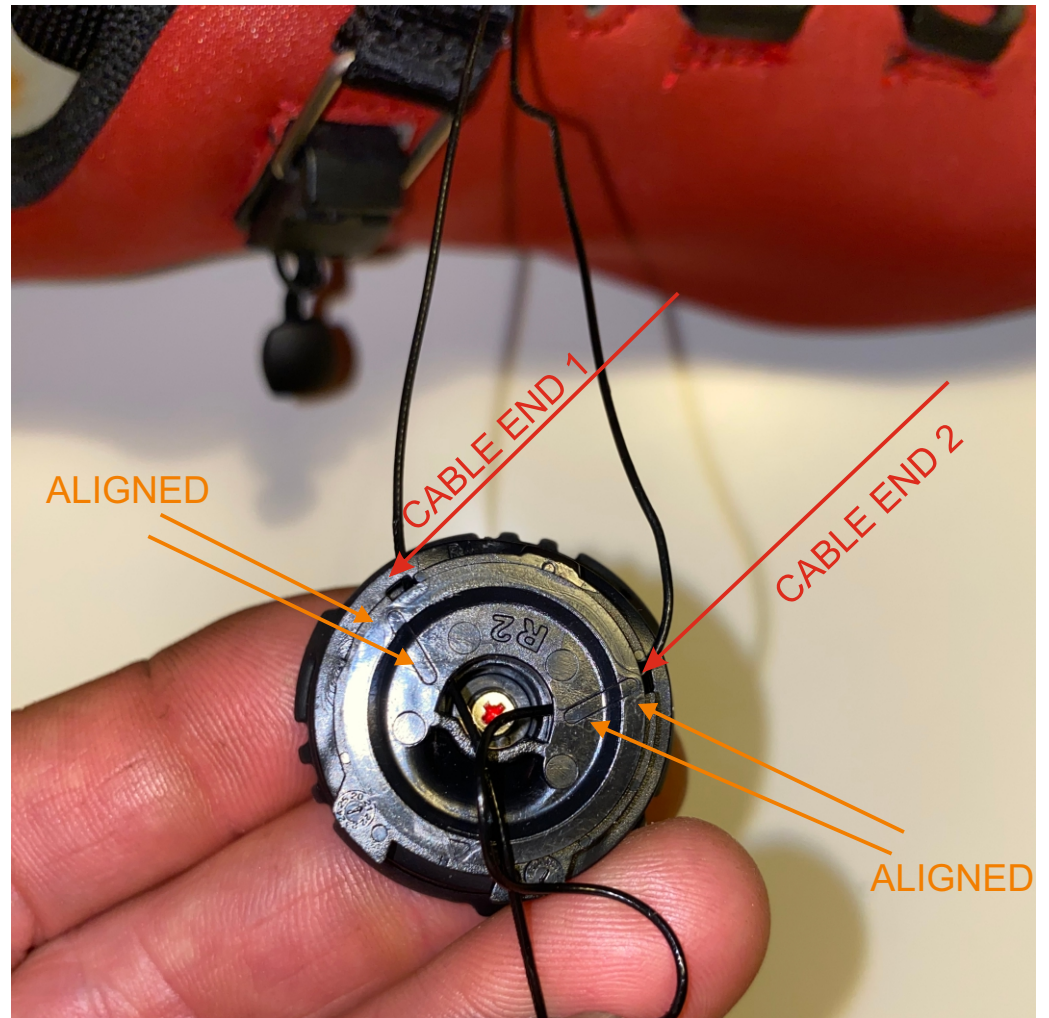


AGAINST MOZ lace replacement



4: Secure the cable with a double knot. Cut the excess cable

AGAINST MOZ lace replacement

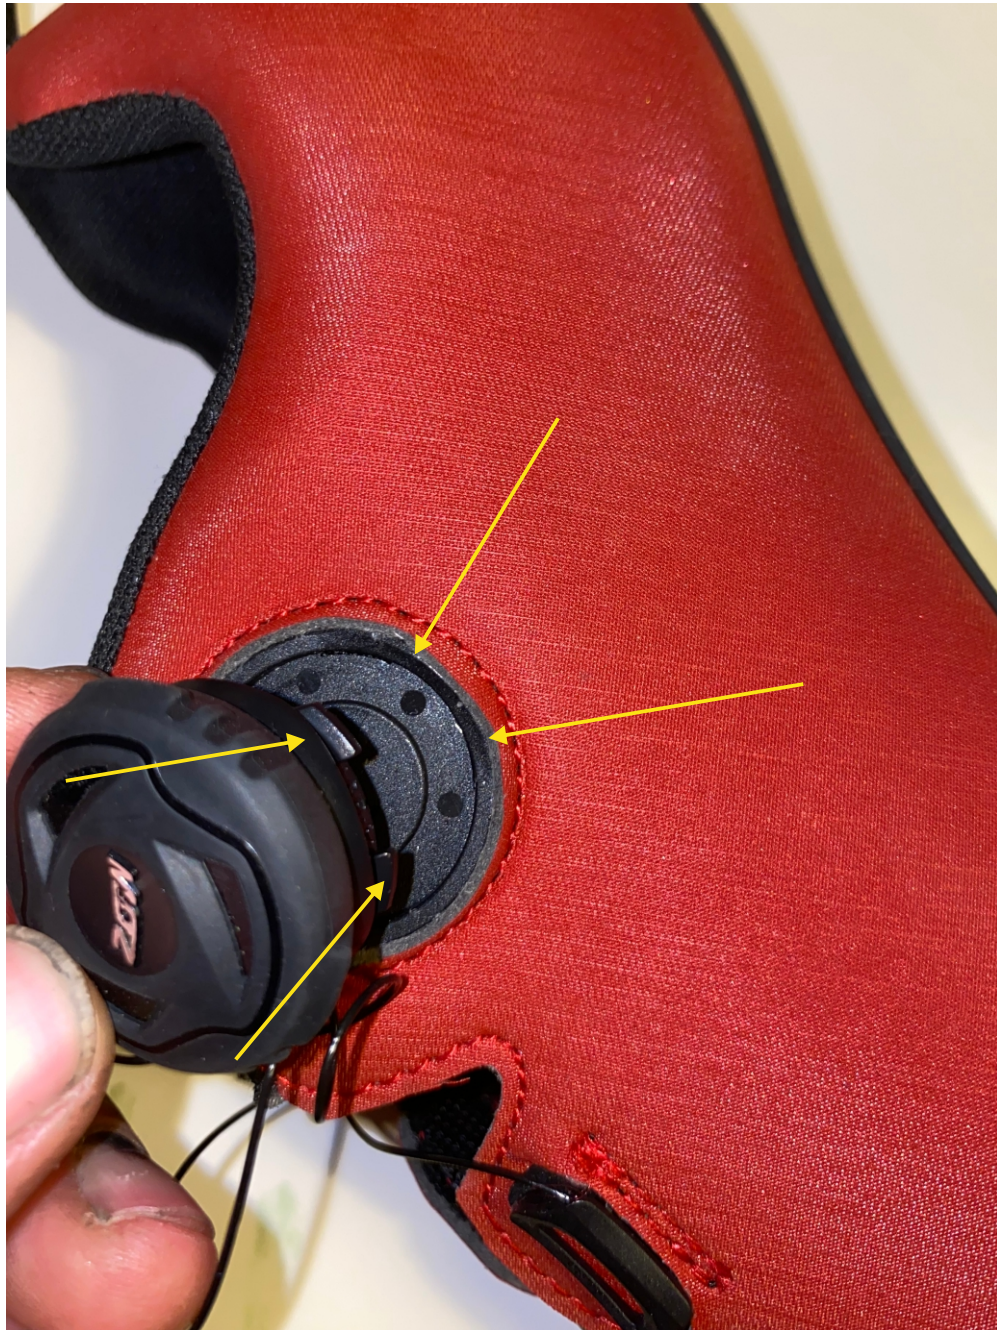

5: Insert the reel knob into the base inserting the tabs into the slots first. Press the knob on the base